

## Package Contents



LTU-Rocket



GPS Antenna Mount



External GPS Antenna




Metal Strap



Zip Ties (Qty. 2)



Universal Bracket

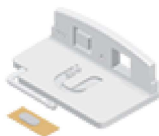

IP67 Upgrade Kit  
(Vent and Gasket)



Gigabit PoE (24V, 1A) with  
Mounting Bracket



Power Cord

## Antenna Compatibility

The LTU-Rocket is designed for use with the following Ubiquiti® airMAX® Sector antenna models\* for Point-to-MultiPoint mode:

- AM-5AC21-60

- AM-5AC22-45

## LTU-Rocket Quick Start Guide

- AM-5AC22-45

- AM-5G16-120
- AM-5G17-90
- AM-5G19-120
- AM-5G20-90
- AP-5AC-90-HD

*\* Requires Universal Bracket (included).*

## Installation Requirements

- Clear line of sight between LTU™ AP and stations
- Clear view of the sky for proper GPS operation
- Vertical mounting orientation
- Mounting point:
  - At least 1 m below the highest point on the structure
  - For tower installations, at least 3 m below the top of the tower
- Ground wires – min. 10 AWG (5 mm<sup>2</sup>) and max. length: 1 m. As a safety precaution, ground the LTU radio to a grounded mast, pole, tower, or grounding bar.




**WARNING:** Failure to properly ground your LTU radio will void your warranty.


- Outdoor, shielded Category 6 (or above) cabling and shielded RJ45 connectors are required for all wired Ethernet connections.
- Surge protection should be used for all outdoor installations. We recommend that you use two Ethernet Surge Protectors, model ETH-SP-G2, one near the device and the other at the entry point to the building. The ETH-SP-G2 will absorb power surges and safely discharge them into the ground.



**Note:** For guidelines about grounding and lightning protection, follow your local electrical regulatory codes.

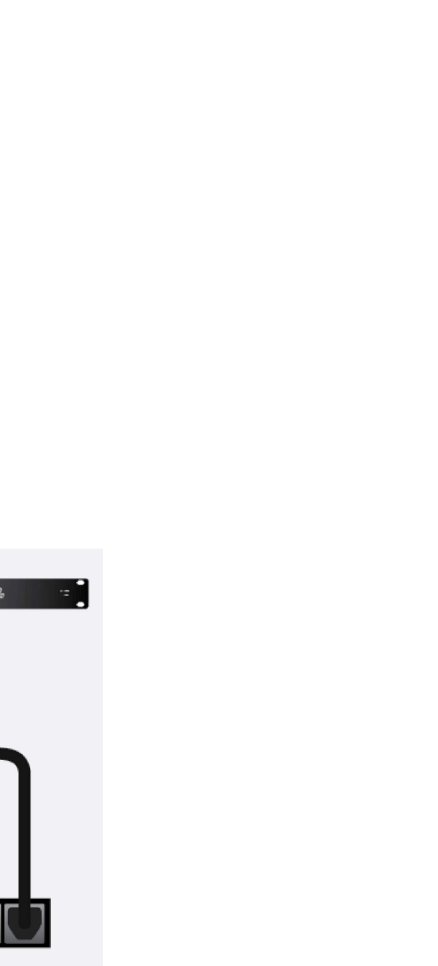

## LTU-Rocket Quick Start Guide

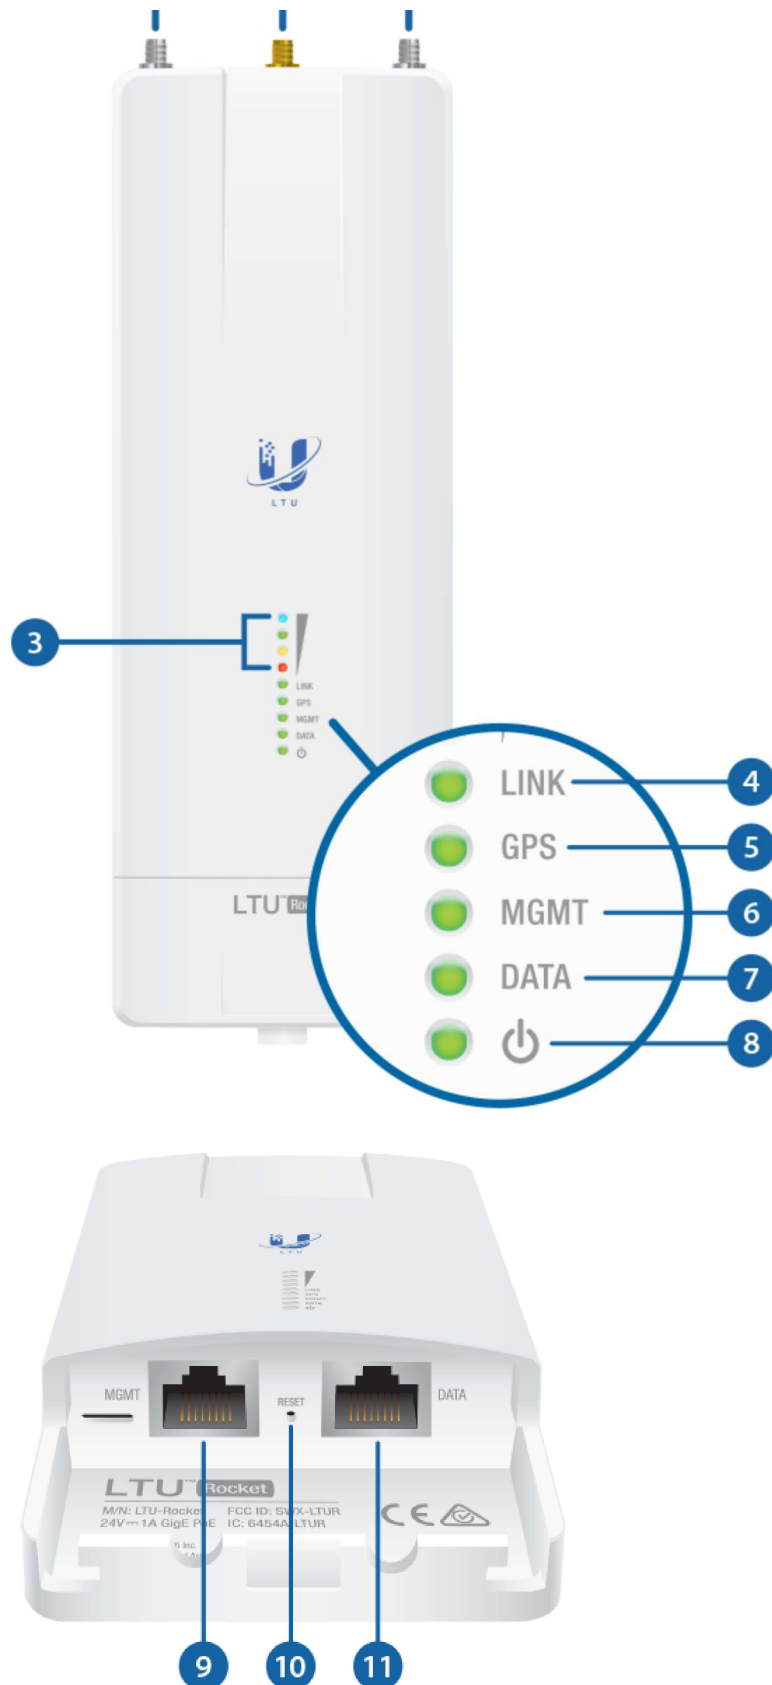

### 1 LTU Antenna Connectors


 


Used to attach RF antenna cables (not included).


## LTU-Rocket Quick Start Guide

Used to attach the GPS Antenna.




### 3 Signal LEDs

Each LED will light when the wireless signal strength is equal to or greater than the LED's threshold value for the current channel width setting. The default threshold values for each channel width are shown below:


10 MHz	20 MHz	30 MHz	40 MHz	50 MHz	
-62 dBm	-59 dBm	-57 dBm	-55 dBm	-51 dBm	
-69 dBm	-66 dBm	-64 dBm	-61 dBm	-56 dBm	
-73 dBm	-70 dBm	-68 dBm	-68 dBm	-65 dBm	
-80 dBm	-78 dBm	-76 dBm	-73 dBm	-72 dBm	



### 4 Link LED

Off	RF Off
	Syncing
	Beaconing
	Registering
On	Operational

### 5 GPS LED

Off	No GPS Synchronization
	Non-Operational (Weak Signal)
On	Operational (Strong Signal)

### 6 MGMT LED

LED not used.

## LTU-Rocket Quick Start Guide

Off	No Ethernet Link
On	Ethernet Link Established
Random Flash	Ethernet Activity
<b>8 Power LED</b>	
Off	No Power
On	Powered On
<b>9 Management Port</b>	
Port not used.	
<b>10 Reset Button</b>	
To reset to factory defaults, press and hold the Reset button for more than 10 seconds while the device is powered on.	
<b>11 Data Port</b>	
Gigabit PoE port for handling all user traffic and powering the device. Default IP address: 192.168.1.20	


## Installation Overview

We recommend that you configure your LTU-Rocket radio before site installation. The following sections provide detailed installation instructions. Perform these instructions in the sequence given.

## Connecting Power over Ethernet

- 1.

LTU-Rocket Quick Start Guide

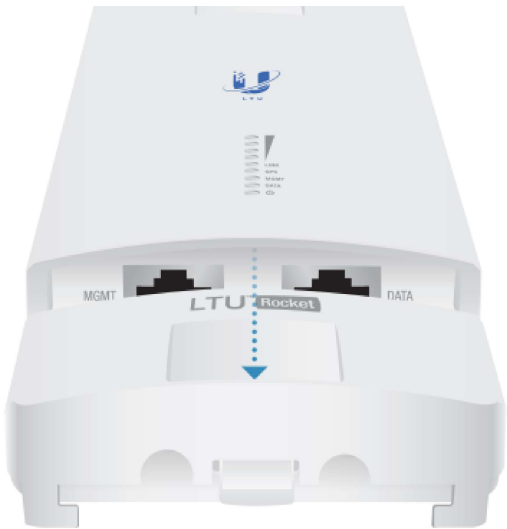

2.



3.



**WARNING:** Use only the included adapter, model POE-24V-5X-HD. Failure to do so can damage the unit and void the product warranty.

## LTU-Rocket Quick Start Guide

### LTU Configuration

Access the LTU Configuration Interface for configuration. By default, Access Point mode is already enabled for the LTU-Rocket. You can choose to configure settings such as Link Name, Duty Cycle, Channel Bandwidth, and Frequency.

The PTMP stations will scan and find the LTU-Rocket and do not need any frequency set as long as they are set with the same Channel Bandwidth and Link Name.


### Configuration Using Browser-Based Interface

1. Configure the Ethernet adapter on your computer with a static IP address on the 192.168.1.x subnet.
2. Launch your web browser. In the address field, type: `http://192.168.1.20`  
Then press enter (PC) or return (Mac).



3. Select your Country and Language. You must agree to the Terms of Use, EULA, and Privacy Policy to use the product. Click Continue.

A screenshot of the LTU-Rocket configuration web interface. The page has a blue header with the 'LTU-Rocket' logo. The main content area is white and titled 'Please Setup Your Device'. It contains two dropdown menus: 'DEVICE COUNTRY' with 'Select Country' and 'LANGUAGE' with 'English'. Below these is a 'TERMS OF USE' section with a paragraph of text and a checkbox labeled 'I agree to the Ubiquiti Networks TERMS OF USE, EULA and PRIVACY POLICY'. A 'CONTINUE' button is at the bottom right. At the very bottom, there are icons for 'NMS', 'CRM', 'Link', and 'WiFiman'.

4. Click the  icon.
5. Configure the following settings:
  - a. If needed, change the Channel Bandwidth, Frequency, Output Power (EIRP), Antenna Gain, and Max TX Modulation settings. The Channel Bandwidth should be the same

Gain, and Max TX Modulation settings. The Channel Bandwidth should be the same on all devices in the PtMP link.

## LTU-Rocket Quick Start Guide



**Note:** The key is an alphanumeric password between 8 and 63 characters long.



6. Click Save Changes.

7. Configure a unique IP address for the Data port:


a. Click the  icon.

b. For the Data IP Address option:

- **DHCP** Have your router use DHCP reservation to assign a unique IP Address.
- **Static** Change the IP Address, Netmask, and other settings to make them compatible with your network.

c. Click Save Changes.


## LTU-Rocket Quick Start Guide

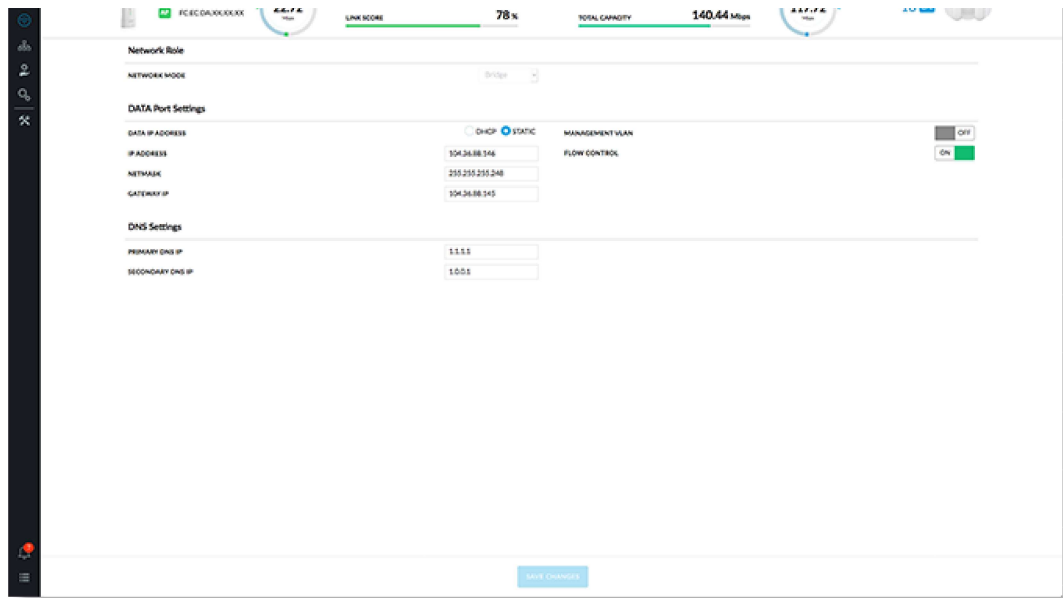


## Upgrade for IP67 Compliance


To protect the LTU-Rocket from intrusion by water, dust, and insects, we recommend installing the IP67 Upgrade Kit (included):

1.

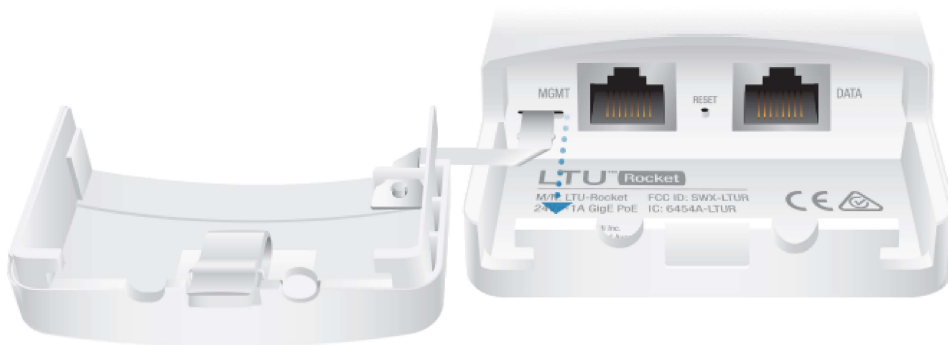


2.

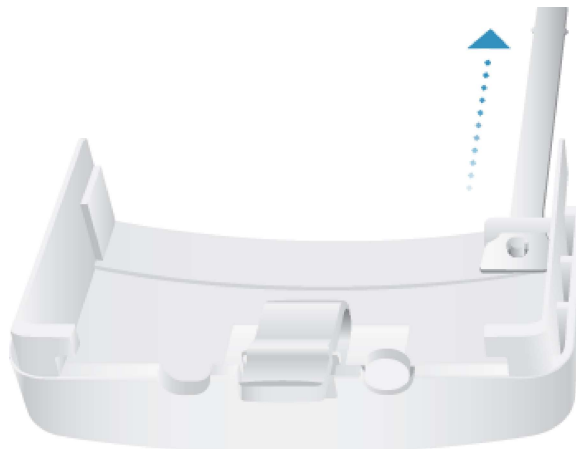

 **Note:** Do not damage or remove the post on the Port Cover.

## LTU-Rocket Quick Start Guide

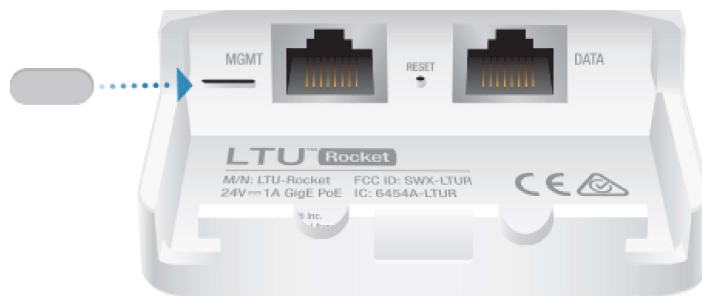

4.




5.



## Installing the Ground Wire

1.

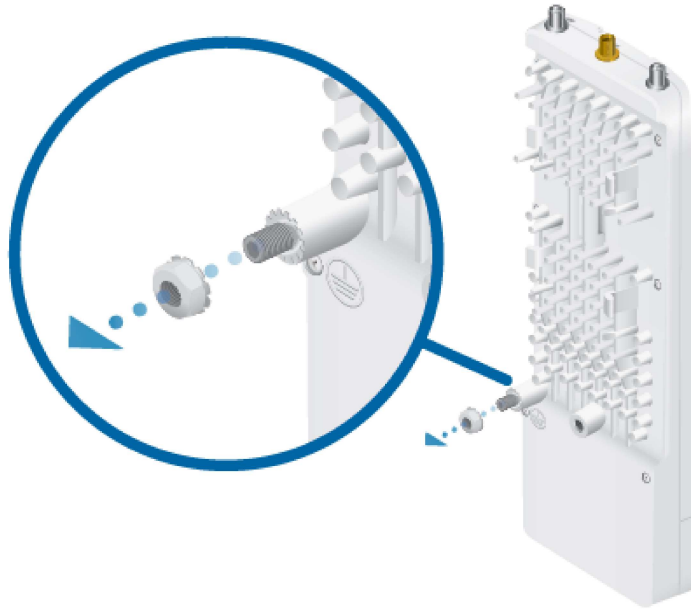

2.



3. At the installation site, secure the other end of the ground wire to a grounded mast, pole, tower, or grounding bar.



**WARNING:** Failure to properly ground your LTU radio will void your warranty.




**Note:** The ground wire should be as short as possible and no longer than one meter in length.

## LTU-Rocket Quick Start Guide

The LTU-Rocket is designed to mount directly onto the Ubiquiti antennas listed in [“Antenna Compatibility”](#). The airMAX Sector antenna AM-5AC21-60 is shown in this section:

1.

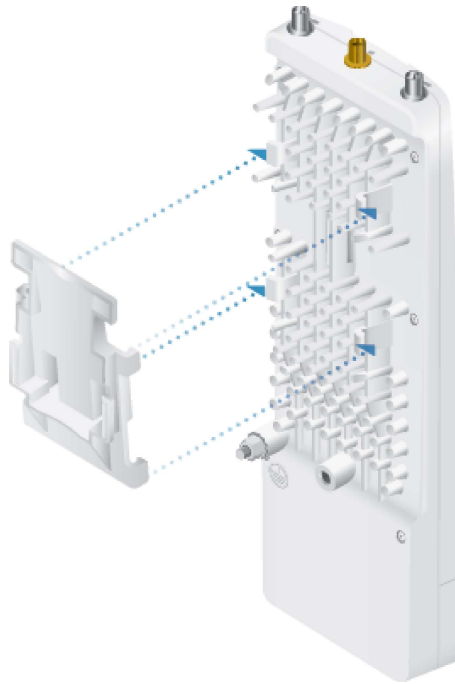


2.




### Mount the External GPS Antenna

LTU-Rocket Quick Start Guide

1.

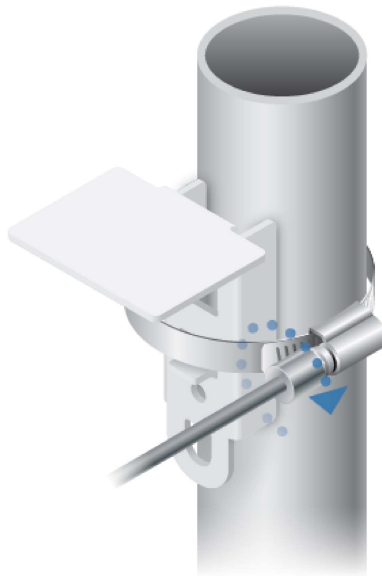

OR

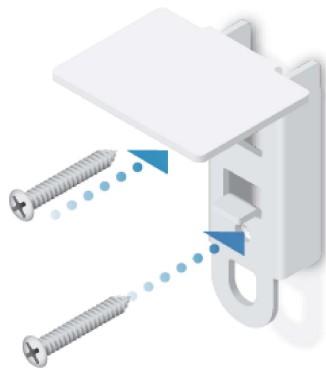

2.



3

5.

## LTU-Rocket Quick Start Guide



## Connecting Power over Ethernet

1.



2.



OR

## LTU-Rocket Quick Start Guide



**Note:** If the IP67 Upgrade Kit is installed, first apply dielectric grease to the cable connector and port.

3.



**WARNING:** The LTU-Rocket must receive a minimum of 15W. Ensure that the voltage range of the PoE source is within these limits:

- 4-pair operation: 18-54V
- 2-pair operation: 30-54V


OR

## LTU-Rocket Quick Start Guide



**WARNING:** Use only the included adapter, model POE-24V-5X-HD. Failure to do so can damage the unit and void the product warranty.

### Optional

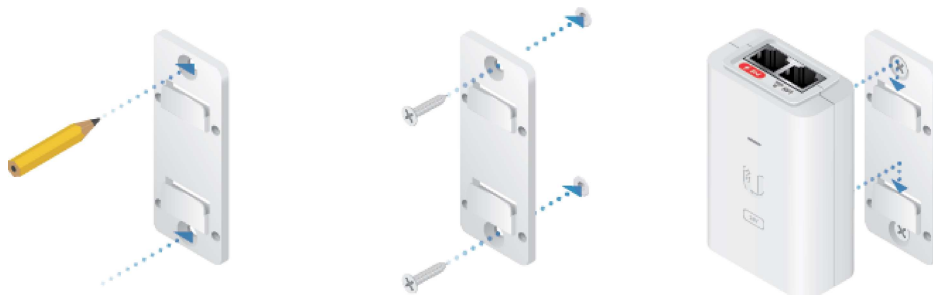

## Installer Compliance Responsibility

Devices must be professionally installed and it is the professional installer's responsibility to make sure the device is operated within local country regulatory requirements.

## LTU-Rocket Quick Start Guide

The screenshot displays the LTU-Rocket configuration web interface. At the top, it shows a 'LINK SCORE' of 78% and 'TOTAL GAIN/CITY' of 140.44 Mbps. The interface is divided into several sections:

- Basic Settings:** Includes 'ACCESS POINT MODE' (ON), 'ANTENNA' (AM-5G20-90 - 20 dBi), and 'CABLE LOSS' (0 dB).
- PTMP Link Settings:** Includes 'LINK NAME' (SPRINGDALE, IA), 'DU/UL RATIO' (75% DOWNLINK, 25% UPLINK), 'SECURITY KEY' (masked), 'FRAME LENGTH' (2 ms), and 'LATENCY' (2 ms).
- PTMP Link Frequency:** Includes a frequency range of 5785 MHz to 5855 MHz and a channel bandwidth of 20 MHz.
- Advanced:** Includes 'CLIENT ISOLATION' (ON), 'MULTICAST ENHANCEMENT' (ON), 'OUTPUT POWER (dBm)' (45 dBm), 'COUNTRY' (Licensed 5G), 'MAX TX MODULATION' (QAM512Q (64Q)), and 'GPS SYNC' (OFF).

A 'SAVE CHANGES' button is located at the bottom right of the interface.

## Antenna

Select your antenna from the list. If Auto Output Power is enabled, transmit output power is automatically adjusted to comply with the regulations of the applicable country. For a Custom antenna, Antenna Gain is entered manually. Note the requirements and antenna types listed below.

## Cable Loss (When applicable)

Enter the cable loss in dB. Output power is adjusted to compensate for loss between the radio and the antenna.

## Certified Antenna Types

This radio transmitter FCC ID: SWX-LTUR / IC: 6545A-LTUR has been approved by FCC / ISCED Canada to operate with the antenna types listed below with the maximum permissible gain for each antenna type indicated. Antenna types not included in this list or having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

Antenna	Frequency	Gain
Sector	5 GHz	22 dBi

## Specifications

LTU-Rocket	
Frequency	5.15 - 5.85 GHz

Dimensions	LTU-Rocket	244 x 82 x 48 mm (9.61 x 3.23 x 1.89")
------------	------------	--

## LTU-Rocket Quick Start Guide

Weight	0.468 kg (1.03 lb)
RF Connectors	(2) RP-SMA Weatherproof (CH0, CH1) (1) SMA Weatherproof (GPS)
GPS Antenna	External, Magnetic Base
Power Supply	24VDC, 1A Gigabit, 4-Pair Passive PoE (Included)
Power Method	Proprietary Passive PoE Pins 1, 2; 4, 5+ and Pins 7, 8; 3, 6-
Supported Voltage Range	+18 to +54VDC <sup>1</sup> (Either/Both RJ45 Ports for Redundancy)
Max. Power Consumption	15W
Networking Interface	
Data Port	(1) 10/100/1000 Ethernet Port Bluetooth v4.0
Management Port	(1) 10/100/1000 Ethernet Port (Reserved for Future Use)
Mounting	Integrated Pole Mount (Included) Rocket Mount Compatible GPS Pole Mount (Included)
Operating Temperature	-40 to 55° C (-40 to 131° F)
Weatherproofing	IP67 <sup>2</sup>
Certifications	FCC Part 15.407 CE EN 302502 v1.2.1, EN 301 893 v1.7.1

<sup>1</sup> Full range depends on Ethernet cable length.

<sup>2</sup> After installation of IP67 Upgrade Kit (included).

System	
Maximum Throughput 50 MHz Capacity	675.84 Mbps <sup>1</sup>
Maximum Range	100+ km
Packets per Second	2,000,000
Encryption	WPA2-PSK (AES)
Forward Error Correction	LDPC
Uplink/Downlink Ratio	25/75, 33/67, 50/50
OS	airOS LTU

Wireless Modes	System	AP
----------------	--------	----

## LTU-Rocket Quick Start Guide

Max. Conducted TX Power	23 dBm <sup>1</sup>
Frequency Accuracy	< 2 ppm
Channel Bandwidth	10/20/30/40/50 MHz Selectable Programmable Uplink and Downlink Duty Cycles

Operating Frequency (MHz)		
Worldwide	4800 - 6200 <sup>2</sup>	
US/CA	U-NII-1	5150 - 5250
	U-NII-2A	5250 - 5350
	U-NII-2C	5470 - 5725
	U-NII-3	5725 - 5850

<sup>1</sup> May vary depending on environmental conditions.

<sup>2</sup> Depends on regulatory region.

Bluetooth LE Management Radio (MHz)	
Worldwide	2400 - 2483.5

## Safety Notices

1. Read, follow, and keep these instructions.
2. Heed all warnings.
3. Only use attachments/accessories specified by the manufacturer.



**WARNING:** Do not use this product in location that can be submerged by water.



**WARNING:** Avoid using this product during an electrical storm. There may be a remote risk of electric shock from lightning.

## Electrical Safety Information

1. Compliance is required with respect to voltage, frequency, and current requirements indicated on the manufacturer's label. Connection to a different power source than those specified may result in improper operation, damage to the equipment or pose a fire hazard if the limitations are not followed.
2. There are no operator serviceable parts inside this equipment. Service should be provided only by a qualified service technician.
3. This equipment is provided with a detachable power cord which has an integral safety ground wire intended for connection to a grounded safety outlet.

- a. Do not substitute the power cord with one that is not the provided approved type. Never use an adapter plug to connect to a 2-wire outlet as this will defeat the continuity of the grounding

## LTU-Rocket Quick Start Guide

modification or misuse can provide a shock hazard that can result in serious injury or death.

- c. Contact a qualified electrician or the manufacturer if there are questions about the installation prior to connecting the equipment.
- d. Protective earthing is provided by Listed AC adapter. Building installation shall provide appropriate short-circuit backup protection.
- e. Protective bonding must be installed in accordance with local national wiring rules and regulations.

## Limited Warranty

[ui.com/support/warranty](http://ui.com/support/warranty)

The limited warranty requires the use of arbitration to resolve disputes on an individual basis, and, where applicable, specify arbitration instead of jury trials or class actions.

## Compliance

### FCC / CAN ICES-3(A)/NMB-3(A)

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules and ISSED Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions.

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'ISDE Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

1. l'appareil ne doit pas produire de brouillage;
2. l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

This equipment has been tested and found to comply with the limits for a Class A digital device. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operations of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

## IMPORTANT NOTE

### Radiation Exposure Statement

- This equipment complies with radiation exposure limits set forth for an uncontrolled environment

- This equipment complies with radiation exposure limits set forth for an uncontrolled environment.

## LTU-Rocket Quick Start Guide

- This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

## AVIS IMPORTANT

### Déclaration sur l'exposition aux rayonnements

- Cet équipement est conforme aux limites prévues pour l'exposition aux rayonnements dans un environnement non contrôlé.
- Lors de l'installation et de la mise en fonctionnement de l'équipement, assurez-vous qu'il y ait une distance minimale de 130 cm entre l'élément rayonnant et vous.
- Cet émetteur ne doit être installé à proximité d'aucune autre antenne ni d'aucun autre émetteur, et ne doit être utilisé conjointement à aucun autre de ces appareils.

### Australia and New Zealand



Warning: This equipment is compliant with Class A of CISPR 32. In a residential environment this equipment may cause radio interference.

### Brazil



**Nota:** Este equipamento não tem direito à proteção contra interferência prejudicial e não pode causar interferência em sistemas devidamente autorizados.

## CE Marking

CE marking on this product represents the product is in compliance with all directives that are applicable to it.



### Country List



AT	BE	BG	CY	CZ	DE	DK	EE	EL	ES	FI	FR	HR	HU
IE	IT	LV	LT	LU	MT	NL	PL	PT	RO	SE	SI	SK	UK

BFWA (Broadband Fixed Wireless Access) members noted in blue



**Note:** This device meets Max. TX power limit per ETSI regulations.

The following apply to products that operate in the 5 GHz frequency range:

• This equipment is compliant with the following frequency range: 5150 - 5250 MHz

**Note:** This device is restricted to indoor use only when operating in the 5150 - 5350 MHz frequency range within all member states.

## LTU-Rocket Quick Start Guide



**Note:** All countries listed may operate at 30 dBm. BFWA member states may operate at 36 dBm.



**Note:** Operation in the 5.8 GHz frequency band is prohibited in BFWA member states. Other countries listed may use the 5.8 GHz frequency band.

## WEEE Compliance Statement

## Declaration of Conformity

## Online Resources

